


Description : Carbon frame cover right side	Part Number : 990D0-21H0R-CRB
Applications : GSX-R 1000K7	Installation Time : 15 minutes

Contents	Ref.	Description	Qty.
	①	Carbon frame cover right side	1
	②	Installation instruction sheets	1



## Tools Required

Ref.	Tools Description
A	Allen key of 6 mm.
B	Allen key of 4 mm.

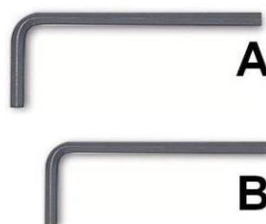

## Important

### ⚠ WARNING / CAUTION / NOTE

Please read this manual and follow its instructions carefully. To emphasize Special information, the symbol and words **⚠ WARNING**, **CAUTION** and **NOTE** have special meanings. These Special meanings apply except when laws or regulations require that the signal words be used with a different meaning. Pay special attention to the messages highlighted by these signal words.

### ⚠ WARNING

Indicates potential hazard that could result in death or injury.

### CAUTION

Indicates potential hazard that could result in vehicle damage.

**NOTE:** Indicates special information to make maintenance easier or Instructions clearer.




**NOTE:** The condition to assemble parts is technical experience. If you not sure if you do a special work step, you should ask your next **SUZUKI** dealer.

### CAUTION

The condition to assemble parts is technical experience. If you not sure if you do a special work step, you should ask your next **SUZUKI** dealer.


#### Preparation for installation

1. Park the motorcycle on a firm, flat surface where it will not fall over.
2. Stop the engine and remove the ignition key, wait until the engine has cooled down.
3. Read these instructions carefully before installation and check that all items are correctly packed in the kit
4. Remove the bolts **(A)** by an Allen Key of 4 mm. Remove the driver seat.
5. Side panels removing. Pull out ( GENTLES) the panel at point **(B)** ; pull backward the panel at point **(C)**.
6. Remove the bolt that fix the gas tank by an Allen key of 6 mm. Lift the tank with the stay from the on board tools and fix it.
7. Remove the left side under cowling by removing the fasteners **(1)** and the screws **(2)**. The symbol ★ indicates the hook location

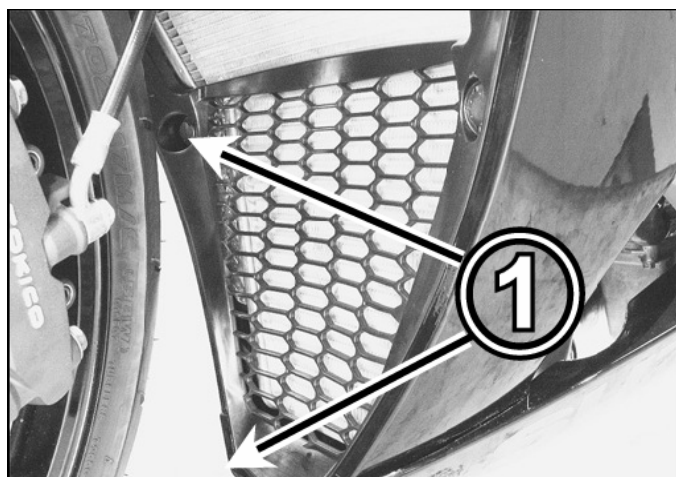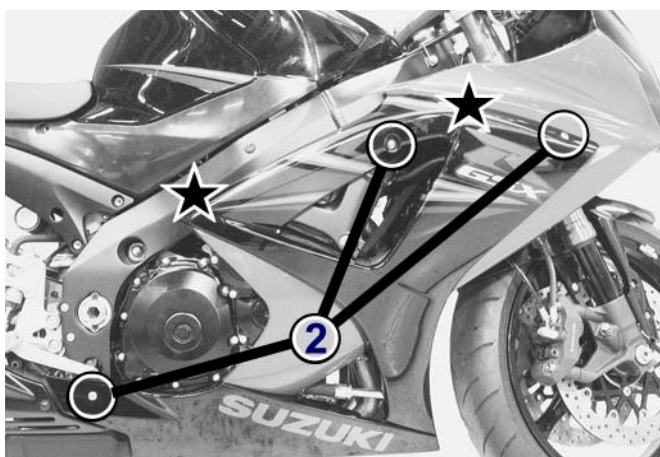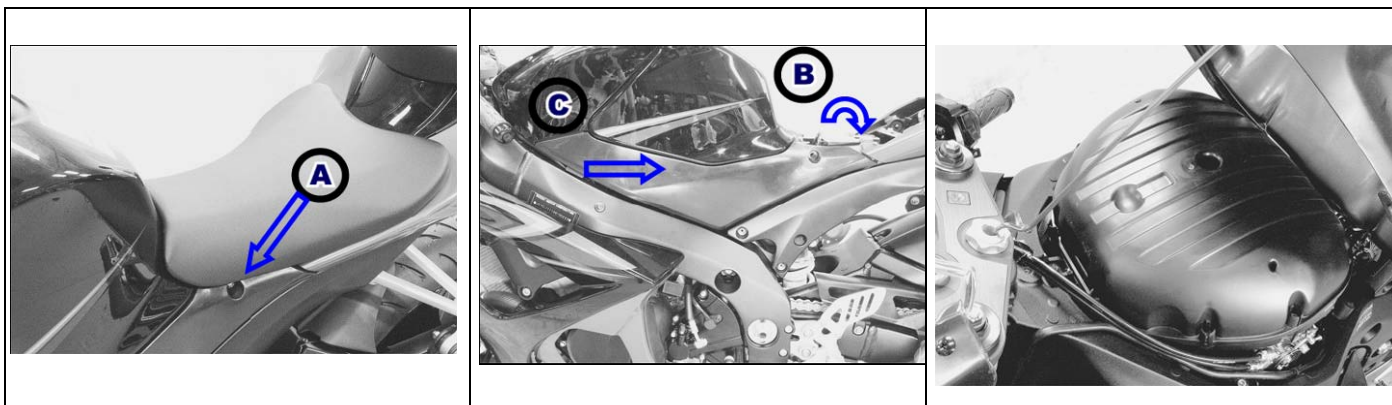

### Installation

1. Remove the protective film from the adhesive that is located inside of carbon protector **(1)**.
2. Insert the part **(1)** on the frame (right side) as shown in image, adjust the position and push it to frame at point **F**.
3. Install the gas tank ; cowling ; seat panels & seat in the reverse order of removal.

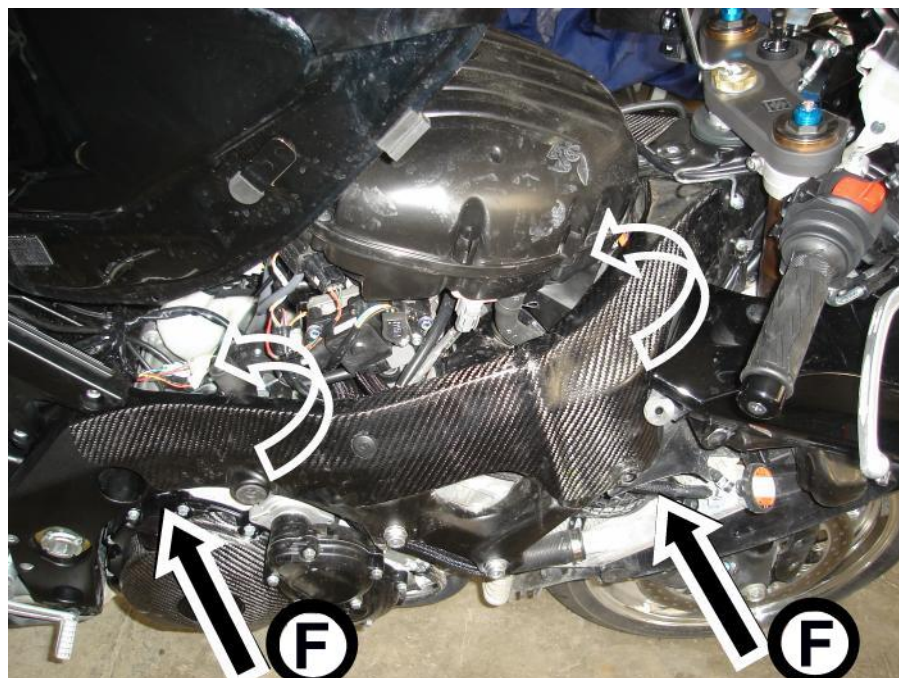

### CAUTION

Check that all the screws are tightened before riding the motorcycle.